


Important notes for pilots carrying CYPRES equipped skydivers

For proper function:

- 1) Once above parachute landing elevation, **never descend** below the parachute landing elevation.

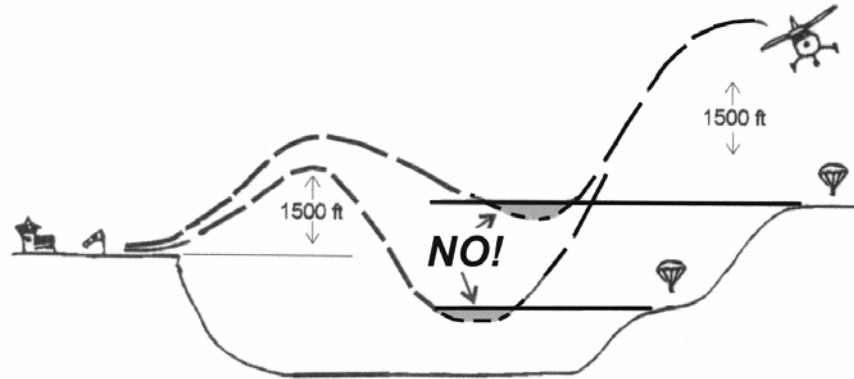

- 2) **Pressurized aircraft:** Never pressurize on the ground with skydivers on board. Make sure the cabin is vented to the outside until you are above 1500 ft AGL.
Pressurize only above 1500 ft. Always keep your cabin pressure at least 10 mbar below the air pressure of the skydivers' landing area.

- 3) **STUDENT and EXPERT CYPRES** must reach **min. 1500 ft (450 m)**
TANDEM CYPRES must reach **min. 3000 ft (900 m)**
above take off and drop zone elevation in order to be operative.
(This is the height that the Cypres arms itself.)

- 4) Be aware if **descending** with CYPRES on board:
STUDENT CYPRES activation speed is approx. 2500 ft/min.
(Tip: Do not exceed 1500 ft/min. vertically below 1500 ft.)